

**THULE**<sup>®</sup>  
SWEDEN

- GB** Fitting instructions
- D** Montageanleitung
- F** Instructions de montage
- NL** Montage-instructies
- I** Istruzioni per il montaggio
- E** Instrucciones de montaje
- PT** Instruções de Montagem
- S** Monteringsanvisning
- FIN** Asennusohje
- EST** Paigaldusjuhend
- LAT** Stiprināšanas instrukcija
- LIT** Pritvirtinimo instrukcijos
- PL** Instrukcja montażu
- RU** Инструкции по установке
- CZ** Návod na montáž
- SK** Návod na montáž
- SLO** Navodila za pritrjevanje
- HR** Uputa za sastavljanje
- HU** A felszerelés módja
- GR** Οδηγίες συναρμολόγησης
- TR** Montaj talimatları
- 中文 安装说明
- 日本語 取扱(取付)説明書
- 한국어 장착 지침
- ไทย คำแนะนำการติดตั้ง

- CHEVROLET Cruze, 3-dr Hatchback, 01-04*
- CHEVROLET Cruze, 5-dr Hatchback, 01-04*
- SUZUKI Ignis, 3-dr Hatchback, 00-04*
- SUZUKI Ignis, 5-dr Hatchback, 00-04*
- SUZUKI Kei, 3-dr Hatchback, 99-00*
- SUZUKI Kei, 5-dr Hatchback, 99-00*
- SUZUKI Swift SE-Z, 3-dr Hatchback, 99-04*
- SUZUKI Swift SE-Z, 5-dr Hatchback, 99-04*

**RAPID  
SYSTEM**

**Kit 1166**



**Follow me...**

 
 
 
 
 
 
 
**THULE**<sup>®</sup>  
SWEDEN

Box 69, 330 33 Hillerstorp, SWEDEN  
www.thule.com



742•A/501-1166-04

**THULE**

**GB** Security regulations  
**D** Sicherheits-Vorschriften  
**F** Instructions importantes  
**NL** Veiligheidsvoorschriften  
**I** Norme di sicurezza  
**E** Reglas de seguridad  
**PT** Normas de segurança  
**S** Säkerhetsföreskrifter  
**FIN** Turvallisuusohjeet  
**EST** Ohutusjuhised  
**LAT** Drošības noteikumi  
**LIT** Saugos taisyklės  
**PL** Wykaz bezpieczeństwa  
**RU** Инструкции по безопасности  
**CZ** Pokyny na montáž  
**SK** Bezpečnostné predpisy  
**SLO** Varnostni predpisi  
**HR** Pravila sigurnosti  
**HU** Biztonsági előírások  
**GR** Κανονισμοί Ασφαλείας  
**TR** Güvenlik kuralları  
**CH** 安全規則  
**TH** 安全規則  
**TH** 安全規則

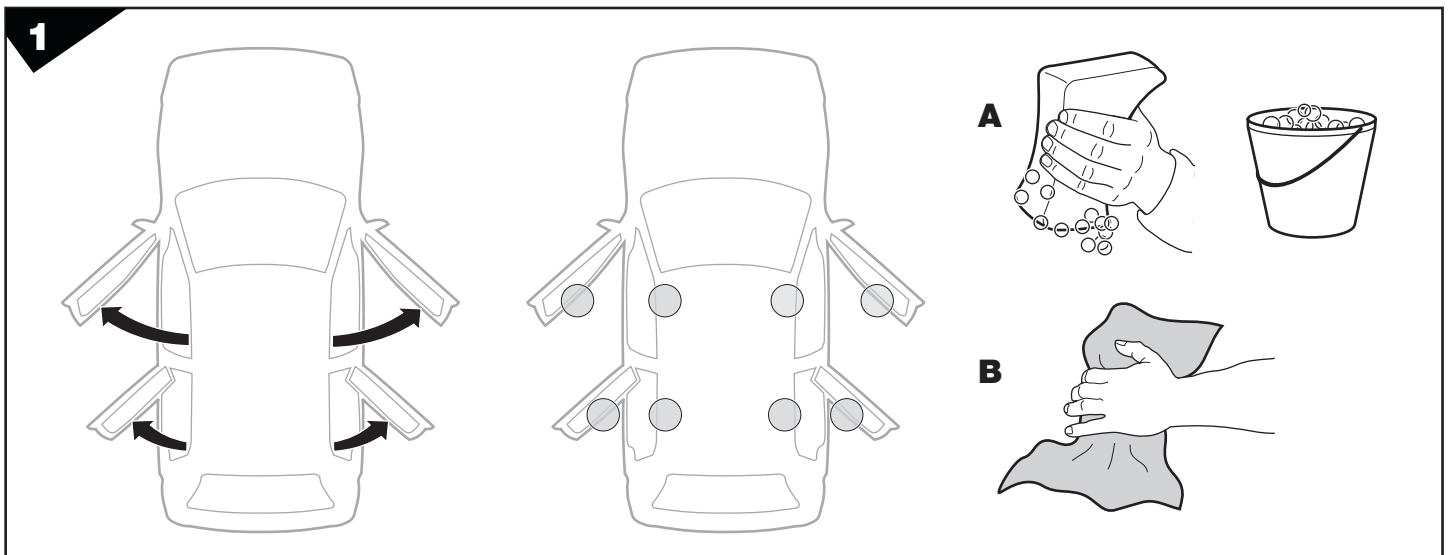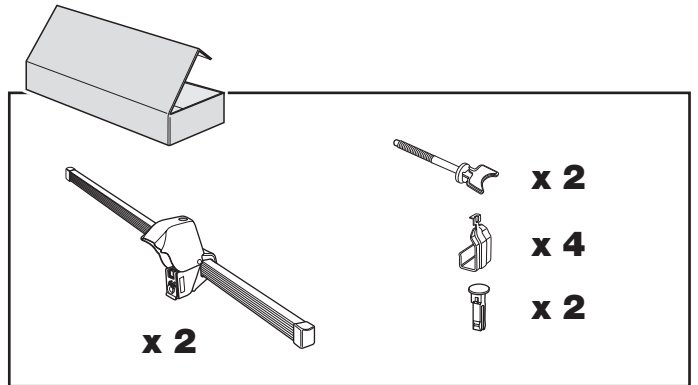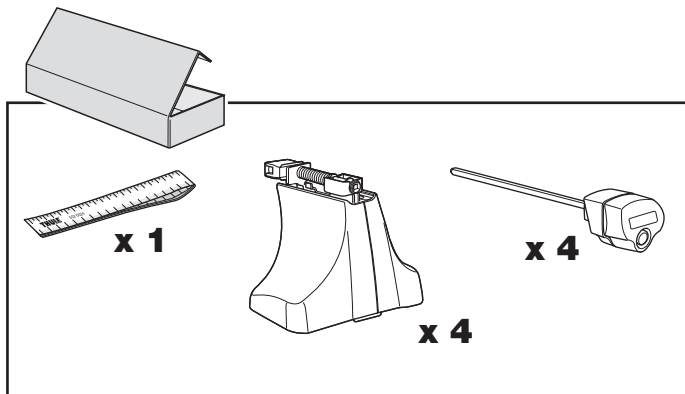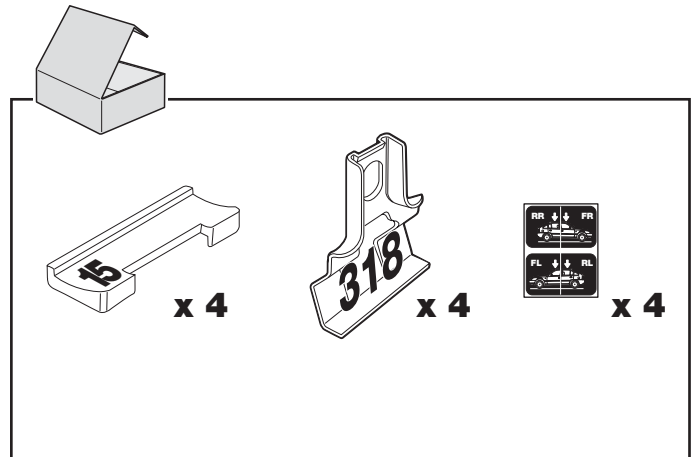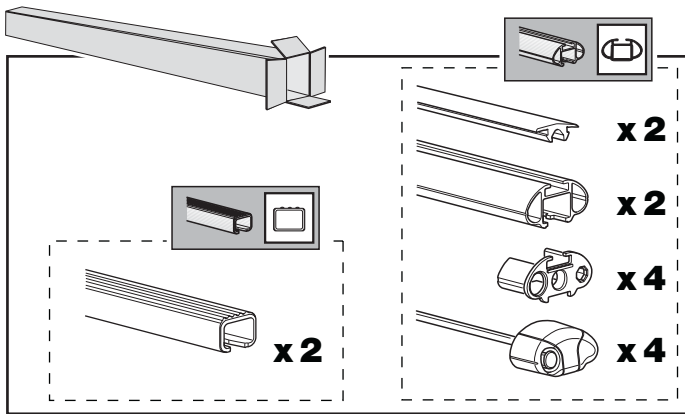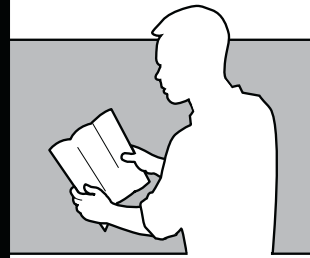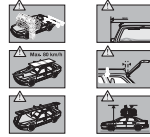



2

  

**3**








 
 
	<b>X</b>
<b>CHEVROLET Cruze</b> , 3-dr Hatchback, 01-04	<b>34</b>
<b>CHEVROLET Cruze</b> , 5-dr Hatchback, 01-04	<b>34</b>
<b>SUZUKI Ignis</b> , 3-dr Hatchback, 00-04	<b>34</b>
<b>SUZUKI Ignis</b> , 5-dr Hatchback, 00-04	<b>34</b>
<b>SUZUKI Kei</b> , 3-dr Hatchback, 99-00	<b>21,5</b>
<b>SUZUKI Kei</b> , 5-dr Hatchback, 99-00	<b>21,5</b>
<b>SUZUKI Swift SE-Z</b> , 3-dr Hatchback, 99-04	<b>34</b>
<b>SUZUKI Swift SE-Z</b> , 5-dr Hatchback, 99-04	<b>34</b>

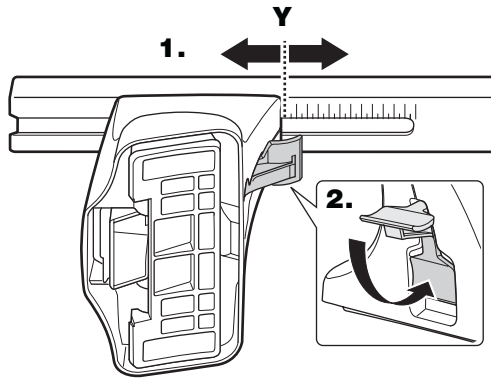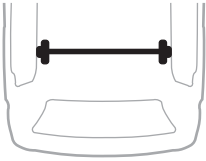





	<b>Y</b>
<b>CHEVROLET Cruze</b> , 3-dr Hatchback, 01-04	<b>31,5</b>
<b>CHEVROLET Cruze</b> , 5-dr Hatchback, 01-04	<b>31,5</b>
<b>SUZUKI Ignis</b> , 3-dr Hatchback, 00-04	<b>31,5</b>
<b>SUZUKI Ignis</b> , 5-dr Hatchback, 00-04	<b>31,5</b>
<b>SUZUKI Kei</b> , 3-dr Hatchback, 99-00	<b>19</b>
<b>SUZUKI Kei</b> , 5-dr Hatchback, 99-00	<b>19</b>
<b>SUZUKI Swift SE-Z</b> , 3-dr Hatchback, 99-04	<b>31,5</b>
<b>SUZUKI Swift SE-Z</b> , 5-dr Hatchback, 99-04	<b>31,5</b>

**4**

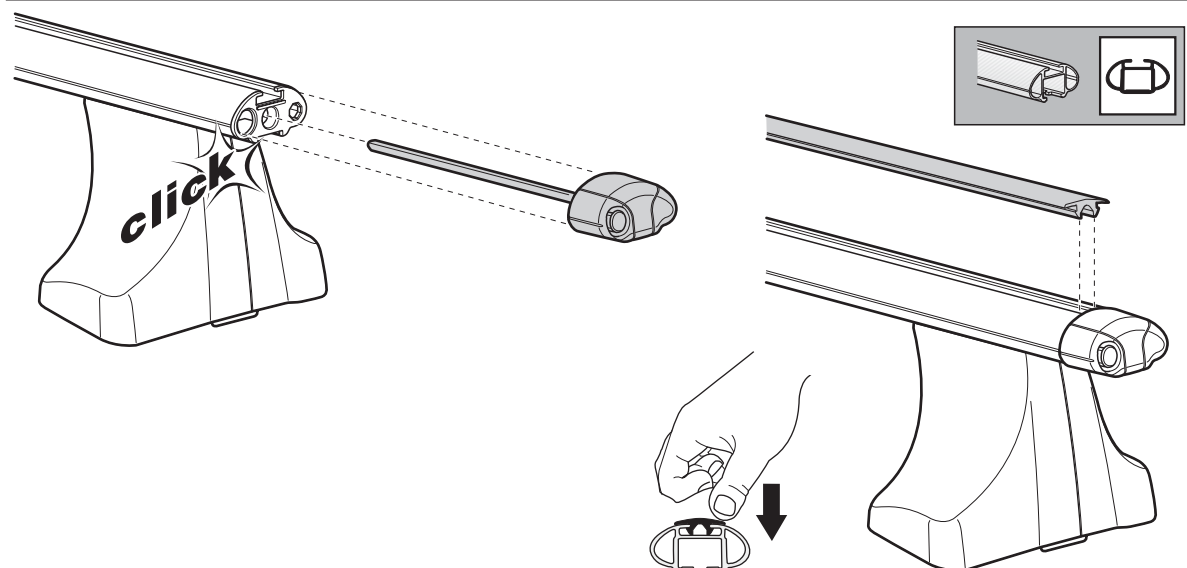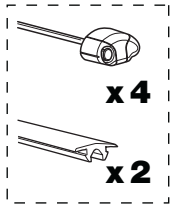   
 


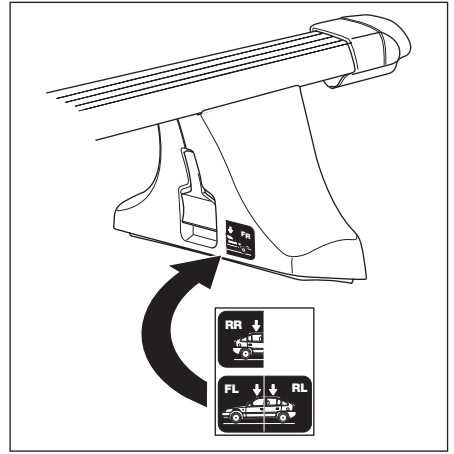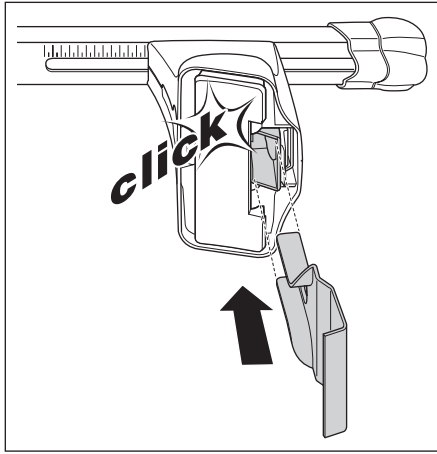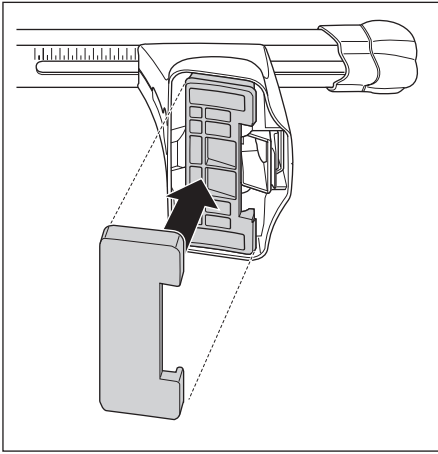   

    
**CHEVROLET** Cruze, 3-dr Hatchback, 01-04  
**SUZUKI** Ignis, 3-dr Hatchback, 00-04  
**SUZUKI** Kei, 3-dr Hatchback, 99-00  
**SUZUKI** Swift SE-Z, 3-dr Hatchback, 99-04

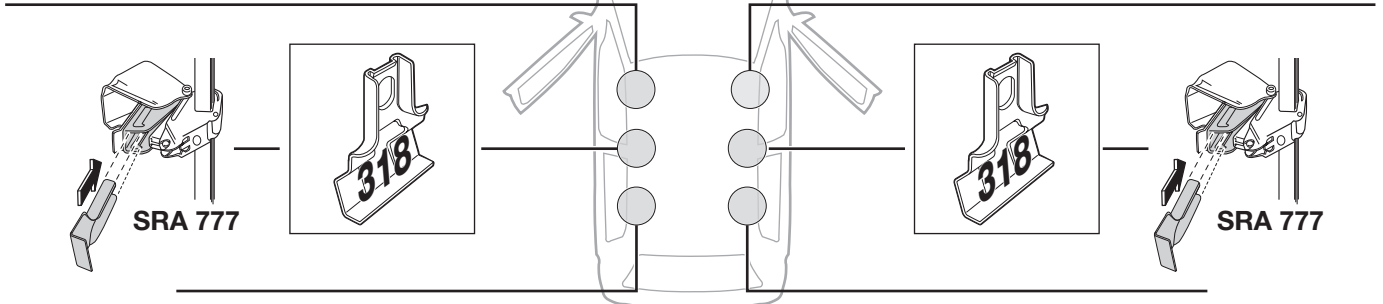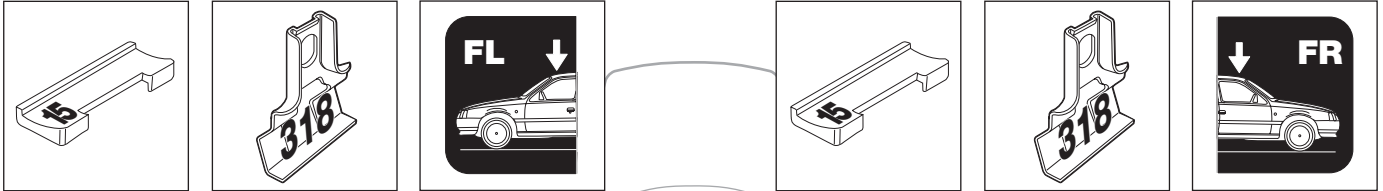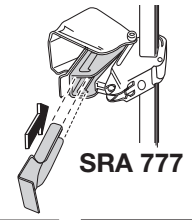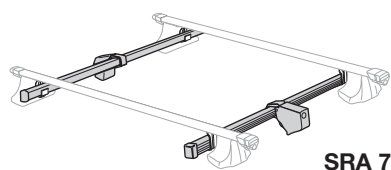

 
 
**CHEVROLET** Cruze, 5-dr Hatchback, 01-04  
**SUZUKI** Ignis, 5-dr Hatchback, 00-04  
**SUZUKI** Kei, 5-dr Hatchback, 99-00  
**SUZUKI** Swift SE-Z, 5-dr Hatchback, 99-04

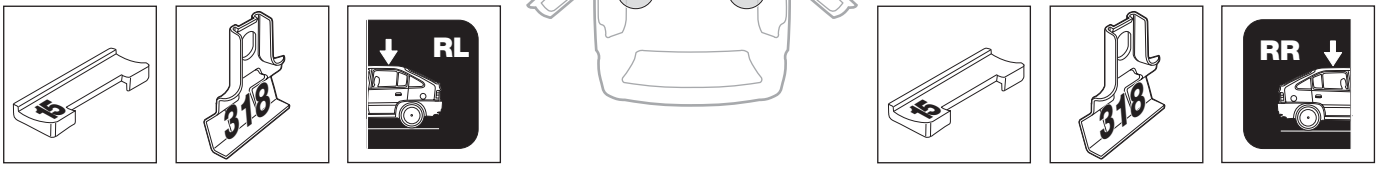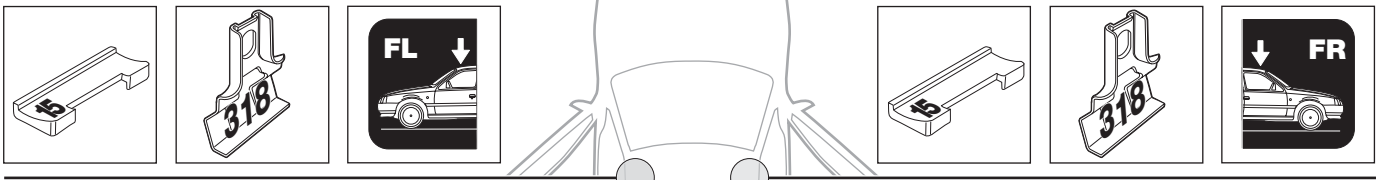



6

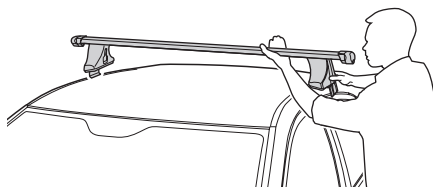 

  **CHEVROLET Cruze**, 3-dr Hatchback, 01-04  
**SUZUKI Ignis**, 3-dr Hatchback, 00-04  
**SUZUKI Kei**, 3-dr Hatchback, 99-00  
**SUZUKI Swift SE-Z**, 3-dr Hatchback, 99-04

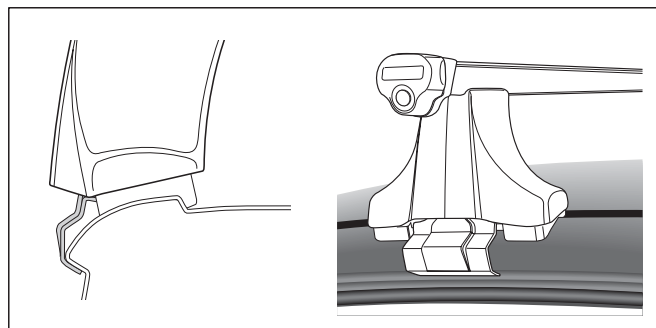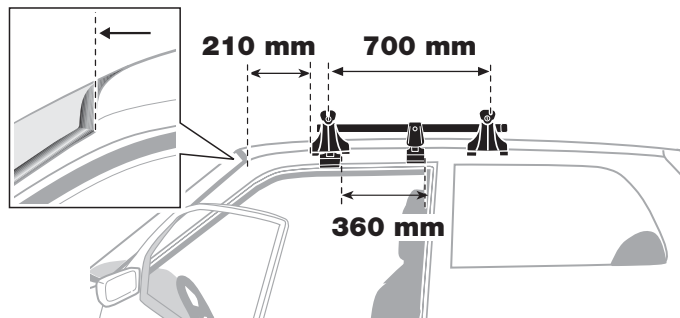


 
 
**CHEVROLET Cruze**, 5-dr Hatchback, 01-04  
**SUZUKI Ignis**, 5-dr Hatchback, 00-04  
**SUZUKI Kei**, 5-dr Hatchback, 99-00  
**SUZUKI Swift SE-Z**, 5-dr Hatchback, 99-04

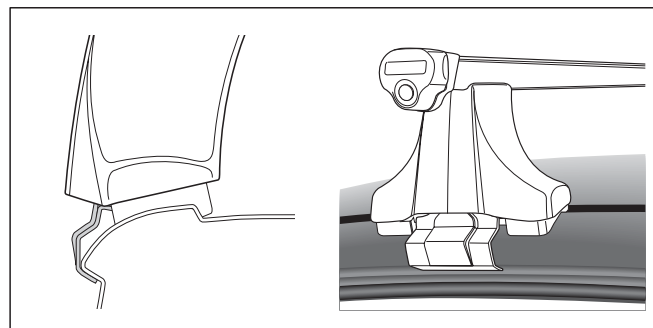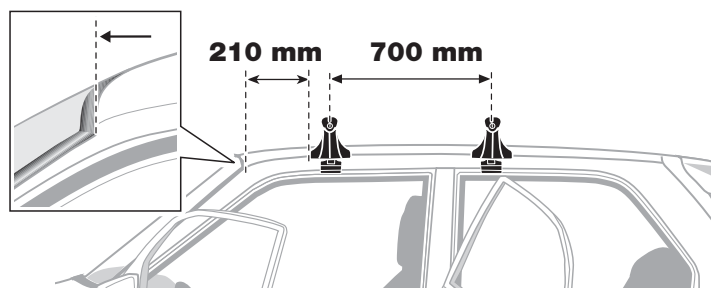

7

**GB** Tighten alternately  
**D** Die Schrauben abwechselnd anziehen  
**F** Serrer alternativement chaque côté  
**NL** Afwisselend aan de linker- en de rechterkant aandraaien  
**I** Serrare alternativamente  
**E** Alternare il serraggio delle viti  
**PT** Aperte alternadamente  
**S** Dra åt växelvis  
**FIN** Kierrä vuorotellen  
**EST** Pinguldage vaheldumisi  
**LAT** Pievelciet pamišus  
**LIT** Užsukinėkite pakaitomis

   **PL** Śruby dokręcaj naprzemiennie  
**RU** Затягивайте попеременно  
**CZ** Pokręťta багаžníka dokręcaj dokręcaj naprzemiennie.  
**SK** Doťahujte striedavo  
**SLO** Privijajte izmenično.  
**HR** Naizmjenično zategnite  
**HU** Egymástól függetlenül szorítandó  
**GR** Σφίγγετε εναλλάξ  
**TR** Dönüşümlü sıkın  
**中文** 交替拧紧  
**한국어** 번갈아 가며 조이십시오.  
**日本語** 交互に締め付けてください。  
**ไทย** ขันในแบบสลับ

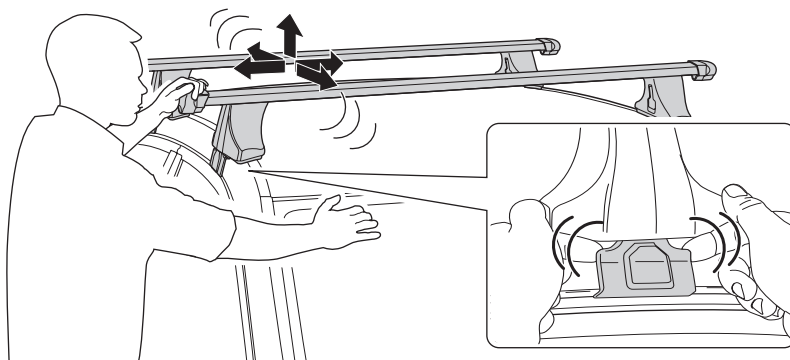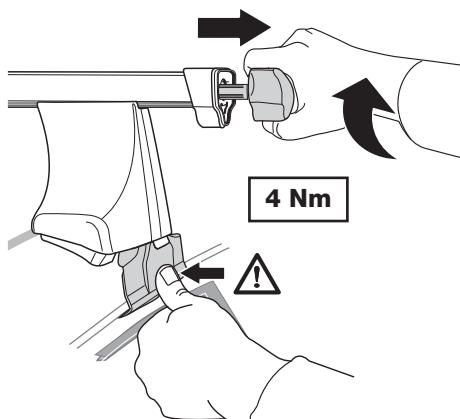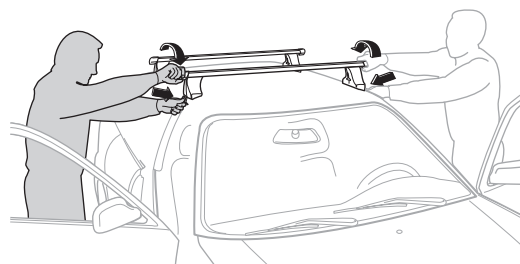

**GB** Removal  
**D** Demontieren  
**F** Démontage  
**NL** Demontage  
**I** Rimozione

**E** Desmontaje  
**PT** Remoção  
**S** Demonerung  
**FIN** Irrotus  
**EST** Eemaldamine



**LAT** Noņemšana  
**LIT** Nuėmimas  
**PL** Wymontowywanie  
**RU** СНЯТИЕ  
**CZ** Odmontování

**SK** Demontáž  
**SLO** Odstranjevanje  
**HR** Uklanjanje  
**HU** Leszerelés  
**GR** Αφαίρεση

**TR** Sökme  
 中文 拆除  
 日本語 取り外し  
 한국어 분리  
 ไทย การถอด



**Fit Tips!**

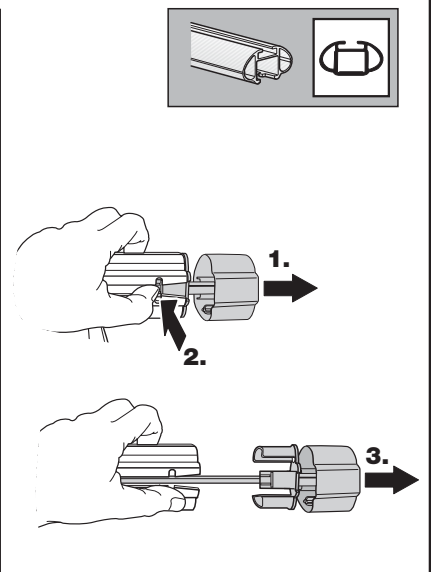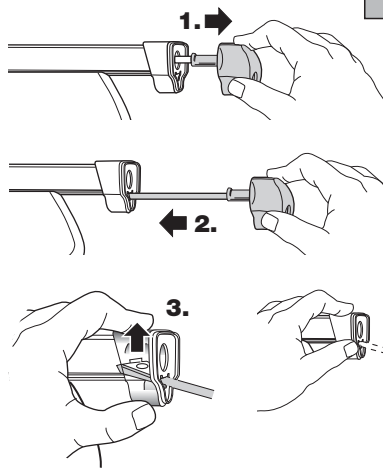  

**THULE**  
**ONE**  
**KEY**  
**SYSTEM**

